



hh simonsen®



ROD VS6
CRIMPER

INDEX

- 04 ROD VS6 Crimper
- 06 User Guide
- 08 Safety instructions
- 11 Warranty
- 18 The ROD Family

INDHOLD


- 04 ROD VS6 Crimper
- 06 Brugsguide
- 14 Sikkerhed
- 16 Garanti
- 18 ROD Familien



THE ROD FAMILY ORIGINAL SINCE 2003

UK > Advanced technology, innovative design, and luxurious detailing come together in HH Simonsen's RODs – a series of high-performance curlers with a shape and size to create any type of curled style. The double titanium-coated barrels with Teflon retain and evenly distribute the heat. To ensure a smooth finish, the barrels are infused with oils and Tourmaline, sealing cuticles and rejuvenating hair's natural oils. Powered by cutting-edge technology, these curling irons deliver ultimate results and are favoured by professionals and curl-lovers alike.

DK > Avanceret teknologi, innovativt design og luksuriøse detaljer kendetegner HH Simonsens RODs – en serie af højtydende krøllejern med forskellige former og størrelser, der gør det muligt at skabe alverdens typer krøller. Dobbelt titanium-belagte cylindere med Teflon bibeholder varmen og fordeler den ligeligt. For en ekstra glat finish har vi tilføjet olier og turmalin, som forsegler hårets yderste lag og fornyer dets naturlige olier. Takket være banebrydende teknologi er du sikret ultimative resultater med vores RODs, som er elsket af både professionelle og privatforbrugere.

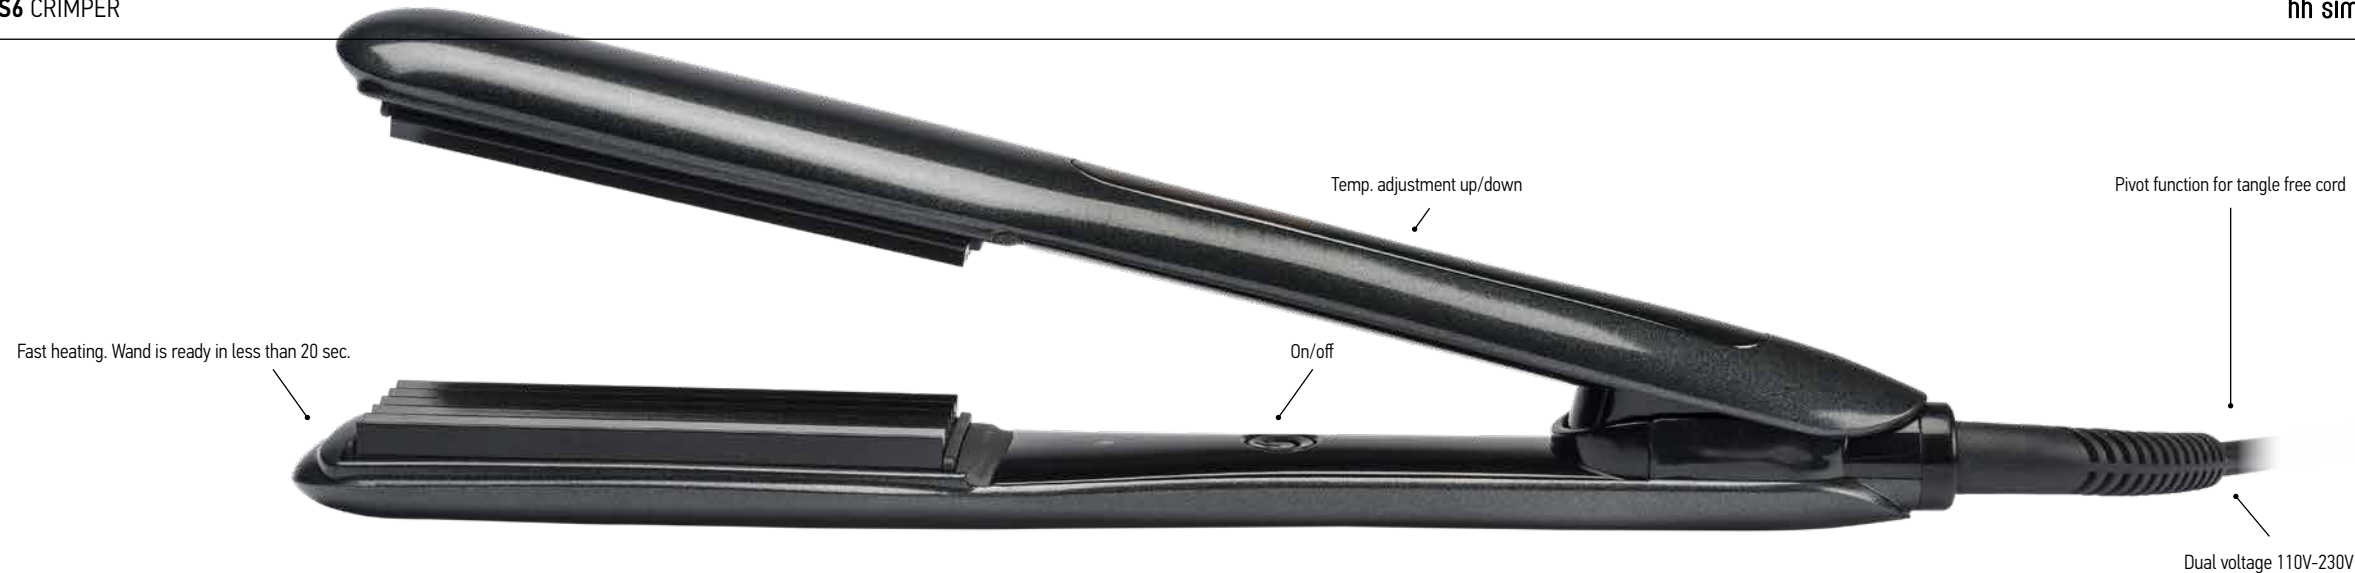

USER GUIDE

HOW TO USE

ROD VS6
Crimper

Watch video guide
[http://hhsimonsen.dk/
step-by-step](http://hhsimonsen.dk/step-by-step)



Se videoguide
[http://hhsimonsen.dk/
step-by-step](http://hhsimonsen.dk/step-by-step)



UK > Starting at the nape, create a small section and clip the rest of the hair away. Use the crimping iron as close to the scalp as possible. After 2-4 seconds move the styler. Use the last wave endpoint as a starting point.

DK > Start nederst (små inddelinger) og sæt resten af håret fast med clips. Klem creperjernet godt sammen så tæt på hovedbunden som muligt. Efter 2-4 sek. flyttes creperjernet. Benyt sidste bølges endepunkt som udgangspunkt.



UK > Make a new parting. Repeat the process above the first section. Be careful not to make the partings too big. It is ideal to make the parting the same width as the styler.

DK > Lav en ny inddeling. Gentag processen ovenover den første. Pas på, du ikke laver for store skilninger. Det er bedst at lave skilningerne i samme bredde som creperjernet.



UK > Repeat the process throughout the hair.

DK > Gentag processen igennem hele håret.



UK > Finalise the style by crimping the hair up at the mid parting.

DK > Afslut med at creppe håret oppe ved din skilning. Enten som side- eller midterskilning.

Thank you for choosing HH Simonsen® Products.

It has always been HH Simonsen®'s ethos to provide the consumer with high quality professional styling products.

Our hair irons boast an abundance of new features and have been designed for professional salon use.

The Spedal Tourmaline Ceramic Heating surface glide effortlessly through your hair, emitting the most possible infrared and ionic energy. The result is 'frizz free' hair with an intensive silky shine.

Our new heating technology has replaced the alder model and ensures the quickest possible heating time (Approx 90 seconds). Unlike the alder, the heating elements are designed to give a constant heat at much higher temperatures. This is imperative for both performance and reliability.

All HH Simonsen® hair irons are easy to handle due to their ergonomic design and have been considerably reduced in weight. Unlike many irons, the ROD VS6 comes with a pivot cord for full flexibility and eliminates tangled power cables.

If used correctly, in accordance to the 'Safety Instructions' our products should provide you with years of use and ultimately give you the results you are looking for! We hope our product will provide you the most delightful styling experience.

1. Safety

Before using any HH Simonsen product please read the safety instructions carefully. This will safeguard you from possible hazards and prevent the appliance from damage caused by incorrect operation. HH Simonsen cannot be held responsible for any direct or indirect damage caused by misuse of this product.

1.1 Explanation of Terms

You will find the following terms displayed in these safety notes:

! Danger: High Risk

Failure to comply with this warning can be fatal or may result in serious injury.

! Attention: Medium Risk.

Failure to comply with this warning may result in injury or damage to the appliance.

Note: Low Risk.

This information should be taken into account when handling the appliance.

1.2 General Safety**!Danger: High Risk:**

- Only use the HH Simonsen appliance to style human hair.
- Do not use on artificial or animal hair.
- Do not use the heating elements to dry objects.
- The appliance must never be used in the bath, shower or near a filled wash basin or any other container containing liquid.
- The appliance should not be operated with wet hands.
- Do not immerse the appliance in water or rinse under dripping wet hair. When connected to the power supply, never leave the appliance unattended or near children.
- Never use the appliance on wet hair.
- Do not leave the appliance unattended.
- Check the mains voltage according to the voltage specified on the rating plate.
- Never leave the hot appliance near towels or other textiles.

Never switch on the appliance when:

- The appliance or the power lead is damaged.
- The device has been dropped, shows visible damage or is not functioning properly.
- The appliance is damaged to such an extent that electrical parts are exposed. Whenever this is the case, disconnect immediately from the power supply and contact the place of purchase.

Please note that the manufacturer's 12-month warranty covers parts failure only and does not cover accidental damage or excessive wear or tear.

Unplug the appliance from the power supply when:

- A defect occurs during operation.
- You wish to clean the appliance.
- The application power switch is in OFF position.
- The appliance is not being used.

! Danger: High Risk:

- Electrical appliances should be kept away from children. Children should not be allowed to use or play with the appliance or the products packaging, e. g. Plastic wrapping or films should also be kept out of reach of babies and young children.
- Arrange the power lead so it can't be tripped over and in a way that will not cause obstruction.
- Protect the power lead from damage. Never pull on the power lead, hold the power plug when removing it from the power socket.
- Clean the product with a slightly dampened cloth. Always disconnect the product from the power supply before cleaning and ensure the unit has cooled down.
- Never use petrol, spirits or other abrasive cleaning substances.
- To prevent possible overheating, never place towels or similar items over or under the appliance.
- Do not use the appliance near combustible gases e.g. directly in the airflow of sprays, aerosols and styling foams.

- Do not attempt to repair the product or connection cable by yourself.
- Do not use an extension cable with this appliance.
- As with most electrical appliances, electrical parts remain live even when the unit is switched off.

! Attention:

- Risk of burns! Avoid contact with skin during or after use until the barrel has cooled down.
- When in use, the power cable should not be allowed to come into contact with the heating elements or other hot surfaces.
- Do not wind the power cable around the appliance, as this can break the cable!
- When in operation only place the appliance on plain, heat resistant surfaces.
- This appliance is designed for indoor use indoors. Do not use outdoors e.g. in a garden or terrace etc.
- Make sure the appliance has completely cooled down before storing it.

- Do not use the appliance near fire or flammable liquids such as gasoline, linoleum etc.

Note

- Do not use the appliance outside, in very humid environments or places with a temperature below 10° C.

2. Preparing the appliance for use

1. Insert the plug into electrical outlet, ensuring that the supply voltage matches the rated voltage stated on the label.
2. Press the ON/OFF to turn the appliance on.
3. Select the the temperature setting for 120°C, 140°C, 160°C, 180°C or 230°C depending on the hairs quality.
4. Press the ON/OFF to turn it off after you finish the treatment.
5. Disconnect the appliance from the power supply
6. Allow the appliance cool down completely before storing

3. Cleaning and care

To ensure that your HH Simonsen product remains in good working condition, clean the appliance regularly. This will remove the residue of hair products that can eventually coat the heating elements. Use a cotton cloth – wrung in soap water if necessary – to clean the barrel. Do not use water.

Important:

Before cleaning, ensure the appliance is unplugged. The barrel must be cold during cleaning. The appliance must be completely dry before using it again.

4. Disposal

Equipment that has come to an end of its service life should undergo correct disposal in accordance with the law. Plastics and electronic parts should be submitted for recycling. Enquiry at your municipal waste disposal site.

Weee

WEEE is short for 'Waste from Electrical and Electronic Equipment' and is used across the EU as a common designation for such waste.

5. Warranty

All HH Simonsen products are covered by a 12-month warranty. Please retain your original purchase receipt or invoice as a proof of date of purchase. The defective appliance must be returned to the original place of purchase in its original packing and along with this warranty as well as the proof of purchase. The guarantee is only valid if the appliance has been operated in strict accordance to the safety instructions.


Warranty Exclusions

- Damages caused by normal wear and tear including chips, scratches, abrasions, discolorations or fading and damage to the power cord.
- Damages caused by careless or improper transportation.

- Damages caused by misuse or improper voltage or cleaning.
- Damages caused by negligence, disassembly or dropping.
- Damages caused by reparation or alteration, which is not from the original manufacturer or its authorized agents.
- Any other damage which are not caused due to materials or workmanship.
- Damages on barrel.

Specifications: Power AC 110-240V, 50/60Hz, 73W
Dual Voltage, means you can use the power supply regardless if it is 110V or 230V.

HH Simonsen cannot be held responsible for damaged hair or extensions.





Brugervejledning

Læs venligst hele brugervejledningen igennem, inden du tager crepejernet i brug.

Super professionelt crepejern

Opvarmning til max temperatur 230°C, på mindre end 60 sekunder. Crepejernet har markedets mest avancerede varmeelementer med Infra-Red teknologi. Crepejernets overflade er coated med det patenterede CETEFTM, som er et keramisk materiale, som sikrer markedets mest effektive lonic-teknologi.

Crepejernet er i en absolut klasse for sig selv, både med teknologi og performance i alle typer af hår. Det har altid været HH Simonsen® mål, at tilbyde frisørerne kvalitetsprodukter til professionelt brug.

HH Simonsen® er kendetegnede ved et funktionelt design, da professionelle frisører har skrappe krav til deres produkter. Overfladen med keramik og tourmalin gør det

legende let at krølle håret, og statisk hår elimineres på grund af de infrarøde lysstråler, samt ved hjælp af lonic-teknologi. Resultatet er 'frizz frit' hår med en silkeblød overflade. Alle HH Simonsen®'s produkter er lette at anvende på grund af deres ergonomiske design og den reducerede vægt.

HH Simonsen forbeholder sig ret til at ændre i specifikationerne eller på produktet uden forudgående varsel.

1. Sikkerhedsanvisninger

Før produktet tages i brug, bør du læse disse instruktioner nøje. Anvisningerne er udarbejdet for at hindre ukorrekt brug og sikkerhedsrisici. HH Simonsen kan ikke holdes ansvarlig for direkte eller indirekte skader forvoldt på grund af forkert brug eller misvedligeholdelse af krøllejernet.

1.1. Forklaringsliste

I sikkerhedsbestemmelserne vil du støde på en række anvisninger, som er forklaret herunder.

! Fare: Høj risiko.

Efterkommes denne advarsel ikke, kan det være dødbringende eller resultere i alvorlig personskade.

! Forsigtig: Middel risiko.

Efterkommes denne advarsel ikke, kan det resultere i personskade.

Bemærk: Lav risiko

Disse sikkerhedsinformationer skal huskes og bruges, når krøllejernet er i brug.

1.2. Generel sikkerhed**! Fare: Høj risiko:**

- Krøllejernet må kun anvendes på menneskehår.
- Krøllejernet må ikke anvendes på kunstigt hår eller dyrehår.
- Brug ikke varmeelementerne til at krølle andre objekter.
- Krøllejernet må ikke anvendes i badekarret, brusebadet eller over en fyldt håndvask eller andre beholdere med væske.
- Krøllejernet må ikke anvendes med fugtige eller våde hænder.
- Krøllejernet må ikke komme i kontakt med vand, da

dette kan skade apparatet og/eller medføre alvorlig personskade. Krøllejernet skal holdes tørt hele tiden.

- Krøllejernet må ikke anvendes på vådt hår.
- Krøllejernet må ikke efterlades uden opsyn eller i nærheden af børn med ledningen i stikket.
- Tjek altid stikkontaktens spændingseffekt (volt), så den passer til produktets elektriske specifikationer.
- Placér aldrig det tændte apparat i nærheden af håndklæder, andre tekstiler eller andre brandbare materialer.

Tænd aldrig for krøllejernet når:

- Apparatet eller ledningen er beskadiget.
 - Apparatets elektriske dele kan ses. Hvis dette er tilfældet, skal du straks slukke for stikkontakten og aflevere det der, hvor det er købt. Husk din købskvittering.
- Bemærk, at garantien bortfalder, hvis apparatet er misvedligeholdt eller anvendt i strid med vores retningslinjer.

Fjern ledningen fra stikkontakten såfremt:

- Apparatet er defekt under brug.
- Apparatet skal rengøres.
- Apparatet står på OFF.
- Apparatet ikke bruges.

! Forsigtig:

- Risiko for forbrænding! Undgå kontakt med huden, indtil apparatet har kølet ned, da dette kan forårsage brændemærker.
- Lad ikke apparatet eller ledningen komme i forbindelse med varmeelementerne eller andre meget varme kilder, som f.eks. kogeplader.
- Rul ikke ledningen rundt om apparatet, da ledningen kan knække.
- Placér altid apparatet på en fast, ikke-brændbar overflade.
- Apparatet må kun anvendes indendørs.
- Apparatet skal altid nedkøle, inden det pakkes sammen til opbevaring.

- Efterlad aldrig apparatet tændt, og fjern altid stikket fra stikkontakten efter brug.
- Træk ikke stikket ud af stikkontakten med unødvendig styrke.
- Brug ikke krøllejernet i nærheden af ild eller let-antændelige materialer såsom benzin, gas, fortyndervæsker, linolie, sprays etc.

Bemærk

- Krøllejernet må ikke anvendes udenfor eller i vådrum samt ved temperaturer under 10° C.

2. Brug af krøllejernet

1. Sæt ledningens stik i stikkontakten.
2. Tryk på ON for at tænde for apparatet.
3. Tryk på temperaturjusteringen for at ændre temperaturen imellem 150-210°C.
4. Tryk på OFF, når du er færdig med at bruge apparatet.
5. Afbryd apparatet fra strømforsyningen.
6. Lad apparatet køle ned før opbevaring.

3. Rengøring af krøllejernet

Cylinderen skal rengøres for skidt (hårlak, gele, skum m.m.), som brænder sig fast under brug, med jævne mellemrum. Cylinderen skal rengøres med en ren bomuldsklud. Bomuldskluden kan vrides hårdt op i en let sæbeopløsning for at opløse produktresterne.

Bemærk:

Cylinderen skal være kold inden rengøringen kan finde sted. Apparatet skal være helt tørt, inden det igen kan anvendes og må tidligst tændes en time efter afsluttet rengøring.

Bemærk:

Krøllejernet kan ved brug ændre farve på plastikoverfladerne omkring varmeelementerne samt andre steder, som bliver påvirket af varmen. Disse ændringer i farven er ikke omfattet af garantien.

4. Bortskaffelse

Elektriske apparater skal bortskaffes i overensstemmelse med gældende love og regler. Er du i tvivl, kan du søge råd på din lokale genbrugsplads.

Weee

Apparatet skal bortskaffes i henhold til WEEE-bekendtgørelsen. WEEE står for 'Waste from Electrical and Electronic Equipment' og gælder i EU.

5. Garantibestemmelser

Opstår der problemer med dit krøllejern, skal det indleveres hos forhandleren. Husk at medbringe kvittering eller andet købsbilag.

Bemærk:

Krøllejern, hvor cylinderen ikke er rensat og vedligeholdt efter vores anvisninger er ikke omfattet af garantien.

Garantien omfatter ikke:

- Skader, som skyldes normal slitage såsom ridser på cylinderen, ridser på plastikdelene, farveændringer eller skade på ledningen.
- Skader, som skyldes upassende forsendelse.
- Skader, som skyldes uhensigtsmæssig rengøring.
- Skader, som skyldes forkert spænding og strømtilslutning.
- Skader, som skyldes tab af apparatet, slag eller lignende.
- Skader, som skyldes egne reparationer eller reparationer udført af en ikke-autoriseret reparatør.
- Skader, som med skøn ikke er produktionsfejl.
- Skader på varmeelementer, som ikke kan henvises til produktionsfejl.

Strømforsyning: Power AC 110-240V, 50/60Hz, 73W Dual Voltage, betyder at du kan bruge strømforsyningen uanset om det er 110V eller 230V.

HH Simonsen kan ikke holdes ansvarlig for ødelagt hår eller extensions.



THE ROD FAMILY

VS1 Spiral Curls

VS2 Madonna Curls

VS3 Classic Curls

VS4 Soft Curls

VS5 Deep Waver

VS6 Crimper

VS7 Curls

VS9 Woo Waver

VS10 Casual Curls

VS11 Bouncy Waves





www.hhsimonsen.dk